



Service Manual

Revised: July 27, 2005

For the complete PDF manual
please visit www.LaserPros.com.

Lexmark™ C750

5060-00x

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***



Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.

Edition: July 27, 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:

LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

Lexmark, Lexmark with diamond design, and MarkNet are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

ImageQuick, Optra Forms, and PrintCryption are trademarks of Lexmark International, Inc.

LEXFAX is a service mark of Lexmark International, Inc.

PostScript® is a registered trademark of Adobe Systems Incorporated.

PCL® is a registered trademark of the Hewlett-Packard Company.

Other trademarks are the property of their respective owners.

**© 2004 Copyright Lexmark International, Inc.
All rights reserved.**

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

U.S.A. P/N 12G9174

Table of contents

Notices and safety information	xi
Laser notice	xi
Safety information	xvii
Preface	xx
Definitions	xx
General information	1-1
Tools required for service	1-1
Options and features	1-2
High performance	1-2
Print quality	1-2
Heavy volume reliability	1-2
Automatic calibration	1-2
Resolution	1-3
Toner darkness	1-3
Printer specifications	1-3
Dimensions	1-3
Power and electrical specifications	1-3
Electrical specifications	1-4
Operating clearances	1-4
Fuser web oiler upgrade kit and replacements	1-4
Acoustics	1-5
Environment	1-5
Print speed and performance print speed	1-6
Media specifications	1-7
Acronyms	1-13
Diagnostic information	2-1
Start	2-1
POR (power-on reset) sequence	2-2
Symptom tables	2-3
Symptom table—base printer	2-3
Symptom table—500-sheet drawer option	2-4
Symptom table—HCIT 2000-sheet option	2-4
Symptom table—output expander option	2-5
Symptom table—5-bin mailbox option	2-5
Symptom table—finisher option	2-5
Error code table	2-6
9xx service errors	2-6
1xx service errors	2-9
Sub error code table	2-17
Programming errors - P101 through P116	2-20
Understanding the printer operator panel	2-20
Operator panel buttons	2-20
Color Menu	2-22
Utilities Menu	2-23
2xx Paper jam message table	2-25
User attendance message table	2-28

Service checks	2-42
100 ITU Error	2-42
120 Error code	2-44
121 Error code	2-45
122 Error code	2-46
123 Error code	2-46
124 Error code	2-46
125 Error code	2-47
126 Error code	2-47
127 Error code	2-48
128 Error code	2-48
129 Error code	2-49
130 Error code	2-50
131 Error code	2-51
132 Error code	2-52
133 Error code	2-53
134 Error code	2-54
135 Error code	2-55
136 Error code	2-56
148 Error code	2-57
149 Error code	2-58
150 Error code	2-58
151 Error code	2-59
152 Error code	2-59
153 Error code	2-60
154 Error code	2-61
155 Error code	2-62
156 Error code	2-62
157 Error code	2-63
158 Error code	2-64
159 Error code	2-64
160 Error code	2-65
161 Error code	2-65
162 Error code	2-65
163 Error code	2-66
164 Error code	2-66
165 Error code	2-66
200 Paper jam—Tray 1	2-67
200 Paper jam—Options and envelope feeder	2-69
201 Paper jam	2-71
201 Paper jam	2-72
202 Paper jam	2-73
230 Paper jam	2-76
24x Paper jam	2-77
Printer configuration and 24x paper jam codes	2-77
Printer configuration diagrams for 24x paper jams	2-81
250 Paper jam	2-82
271 Paper jam - Check Bin 1	2-84
272 Paper jam - Check Bin x	2-85
274 Paper jam - Check Bin 4	2-86
280 Paper jam	2-87
900 RIP Software Error	2-88
925 Error code	2-90
926 Error code	2-90
927 Error code	2-91

930 Error code	2-92
940 Error code	2-93
941 Error code	2-95
942 Error code	2-97
943 Error code	2-99
990 Service error	2-101
5-Bin mailbox option service check	2-104
500-Sheet drawer option service check	2-108
AC and DC power service check	2-112
Autocompensator service check	2-114
Black only retract (BOR) service check	2-117
Close door/HVPS/printhead interlock switch service check	2-118
Duplex option service check	2-120
Finisher service check	2-122
Fuser service check	2-127
High-capacity input tray (HCIT) 2000-sheet option service check	2-128
Operator panel LCD/status LED/buttons service check	2-132
Output Expander option service check	2-134
Print quality service checks	2-136
Horizontal line	2-137
Horizontal lines or streaks	2-137
Vertical lines or streaks	2-138
Light lines or streaks appear on the page	2-138
White streak in color plane	2-138
Blank page (no image)	2-139
Entire page is mostly one color—Full bleed planes in one color	2-140
Missing colors—Complete or partially missing color planes	2-141
Black and white only—cyan, magenta, and yellow are missing	2-142
Light print over the entire page	2-142
All colors have light print over the entire page	2-142
One color has light print over the entire page	2-143
Low image density	2-143
Poor color alignment	2-144
Negative ghosting or faded image	2-144
Residual image	2-145
Uneven printing	2-145
Toner smears or rubs off the page with no error code displayed	2-145
Smudged or distorted images on fused page	2-146
Toner is on the back of the printed page	2-146
Transparency print quality is poor	2-147
Second transfer roll service check	2-148
Tray 1 service check	2-149
Tray 1 paper size sensing service check	2-150
Diagnostic aids	3-1
Diagnostic aids	3-1
Printhead diagnostics	3-1
Print quality defect locator chart	3-3
Partial Print Test	3-5
Configuration Menu	3-7
Entering CONFIG MENU	3-7
Black&White Lock	3-7
Fuser Cnt Value	3-7
Reset Fuser Cnt	3-8
Prt Quality Pgs	3-8
Color Trapping	3-8

SIZE SENSING	3-8
TYPE SENSING	3-9
SENSED TRANS	3-9
SENSED PAPER	3-9
CALIBRATE TRAYS	3-9
Panel Menus	3-10
PPDS Emulation	3-10
Download Emuls	3-10
Demo Mode	3-10
Factory Defaults	3-11
Energy Conserve	3-11
ITU Alignment	3-11
Auto Color Adjust	3-12
Exit Config Menu	3-12
Diagnostics Mode	3-13
Entering Diagnostics Mode	3-13
Exiting Diagnostics Mode	3-13
REGISTRATION	3-14
ALIGNMENT	3-15
Cyan, Yellow, Magenta	3-15
Drift Sensors	3-16
To exit the test, press Return or Stop.	3-16
TOP FINE MAR ADJ	3-16
MISC TESTS	3-16
Motor Detect	3-16
Belt Tracking (ITU 4th point adjustment)	3-17
PRINT TESTS	3-18
Print Tests (input source)	3-18
Prt Quality Pgs	3-19
Prt Line Len Pg	3-19
HARDWARE TESTS	3-19
LCD Test	3-19
Button Test	3-19
DRAM Test	3-20
CACHE Test	3-20
ROM Test	3-21
Parallel Wrap Test	3-21
Serial Wrap Test	3-22
DUPLEX TESTS	3-23
Quick Test	3-23
Top Margin	3-23
Sensor Test	3-23
INPUT TRAY TESTS	3-24
Feed Test	3-24
Sensor Test	3-24
OUTPUT BIN TESTS	3-25
Feed Test	3-25
Feed to All Bins	3-25
Diverter Test	3-25
Sensor Test	3-26
FINISHER TESTS	3-27
Staple Test	3-27
Feed Test	3-27
Sensor Test	3-27
Hole Punch	3-28
BASE SENSOR TEST	3-29

DEVICE TESTS	3-29
Quick Disk Test	3-29
Disk Test/Clean	3-29
Flash Test	3-30
PRINTER SETUP	3-30
Defaults	3-30
Reset Calibrat.	3-31
Page Count	3-31
Perm Page Count	3-31
Serial Number	3-31
Engine Setting x	3-31
Model Name	3-32
Configuration ID	3-32
Edge to Edge	3-32
Cal Ref Adj	3-32
EP SETUP	3-32
EP Defaults	3-32
Fuser Temp	3-32
DC Charge Adjust	3-32
Dev Bias Adj	3-33
Transfer Adjust	3-33
ERROR LOG	3-33
View Log	3-33
Clear Log	3-33
High-capacity input tray tests	3-34
HCIT Standalone Test Mode	3-34
Dip Switch Settings	3-34
Repair information	4-1
Handling ESD-sensitive parts	4-1
Screw identification table	4-2
Removal procedures	4-5
Top cover assembly removal	4-5
Rear fan cover removal	4-8
Rear cover removal	4-8
Front right handle cover assembly removal	4-9
Front left handle cover assembly removal	4-10
Front cover assembly removal	4-10
Lower right door assembly removal	4-12
Left lower cover removal	4-13
Lower jam access door assembly removal	4-14
Redrive door removal	4-14
Paper path access door cover removal	4-15
Front lower left cover removal	4-16
Autocompensator pick assembly removal	4-17
BOR drive assembly removal	4-23
Cartridge contact assembly removal	4-23
Cartridge drive assembly removal	4-26
Cartridge rail assembly	4-27
Developer HVPS board removal	4-28
Engine board removal	4-29
Engine board shield removal	4-30
Friction buckler removal	4-30
Fuser assembly removal	4-31
Fuser bottom duct removal	4-32
Fuser drive assembly removal	4-33

Fuser fan removal	4-34
Fuser top duct removal	4-34
Fuser web oiler motor assembly removal	4-35
ITU assembly removal	4-37
ITU drive assembly removal	4-37
ITU drive motor removal	4-38
Low voltage power supply (LVPS) removal	4-38
Multipurpose feeder (MPF) removal	4-40
Nip relief handle removal	4-42
Operator panel removal	4-46
Outer EMC shield removal	4-47
Paper size sensing assembly removal	4-48
Pick rolls	4-48
Printhead removal and adjustment	4-50
Printhead mechanical alignment	4-51
Printer registration (only for black printhead replacement)	4-56
Electronic color alignment	4-58
Print line length calibration	4-61
Printhead thermistor card removal	4-62
PSD sensor assembly removal	4-63
Rear bellcrank removal (cyan, magenta, yellow)	4-64
Rear bellcrank removal (black)	4-66
Redrive assembly removal	4-68
Registration motor removal	4-69
RIP board removal	4-70
RIP fan removal	4-71
RIP board shield assembly removal	4-71
S2/NMS/transparency sensor assembly removal	4-72
Second transfer roll removal	4-79
Transfer HVPS board removal	4-80
Transfer plate assembly	4-81
Vacuum transport belt (VTB) removal	4-82
Vacuum transport belt (VTB) fan removal	4-84
Waste container door removal	4-84
Waste container latch removal	4-85
Web oiler fuser kit installation	4-85

Connector locations 5-1

Locations	5-1
Printer boards	5-1
Printer motors	5-2
Printer sensors	5-3
Cartridge contact assembly pin locations	5-4
Engine board cabling	5-5
RIP board cabling	5-6
Connectors	5-7
Engine board	5-7
RIP board	5-14
Transfer high voltage power supply (HVPS)	5-19
Developer high voltage power supply (HVPS) board	5-20
Low voltage power supply (LVPS)	5-22
Low voltage power supply (LVPS)	5-24

High-capacity input tray (2000-sheet HCIT) board	5-26
High-capacity output finisher (HCOF)	5-28
HCOF LVPS board	5-28
HCOF SUB LVPS relay board	5-28
HCOF system board	5-29
Preventive maintenance	6-1
Safety inspection guide	6-1
Lubrication specifications	6-1
Lubrication for replacement motors	6-2
Fuser drive assembly	6-2
Cartridge drive assembly	6-3
ITU drive assembly	6-3
Scheduled maintenance	6-4
Parts catalog	7-1
How to use this parts catalog	7-1
Assembly 1: Covers	7-2
Assembly 2: Cartridge mounting	7-6
Assembly 3: Fuser	7-8
Assembly 4: Fuser drive	7-12
Assembly 5: Vacuum transport belt assembly	7-13
Assembly 6: Transfer	7-14
Assembly 7: Printheads	7-15
Assembly 8: Paper feed output (redrive)	7-16
Assembly 9: Paper feed input	7-17
Assembly 10: Paper size sensing	7-18
Assembly 11: Paper feed transport	7-19
Assembly 12: Multipurpose feeder (MPF)	7-20
Assembly 13: 500-sheet integrated tray	7-22
Assembly 14: Autocompensator assembly	7-24
Assembly 15: ITU assembly	7-25
Assembly 16: ITU drive assembly	7-26
Assembly 17: ITU loading	7-28
Assembly 18: BOR drive assembly	7-30
Assembly 19: Cartridge contact assembly	7-31
Assembly 20: Cartridge drive assembly	7-32
Assembly 21: Electronics	7-34
Assembly 22: Electronic cabling—engine board	7-42
Assembly 23: Electronic cabling—RIP board	7-44
Assembly 24: Electronic cabling—transfer HVPS	7-46
Assembly 25: Electronic cabling—developer HVPS	7-47
Assembly 26: Output expander	7-48
Assembly 27: 5-bin mailbox	7-52
Assembly 28: 500-sheet drawer option	7-56
Assembly 29: Duplex option	7-60
Assembly 30: High-capacity input tray (HCIT)	7-64
Assembly 31: High-capacity output finisher (HCOF)	7-68
Assembly 32: High-capacity output finisher cables	7-74
Assembly 33: Options	7-76
Assembly 34: Miscellaneous	7-77

Appendix A—Service tips	A-1
Printhead diagnostics	A-1
Printhead alignment	A-4
Identifying the printheads	A-4
Printhead mechanical alignment	A-5
Printer registration (only for black printhead replacement)	A-10
Electronic color alignment	A-12
Print line length calibration	A-14
Partial Print Test	A-16
Nip relief handle replacement	A-18
Finisher alignment	A-22
Duplex option deflector button replacement	A-29
Appendix B—Print quality samples	B-1
Print Menus—Page one of two	B-1
Print Menus—Page two of two	B-2
Print tests	B-3
Print Quality Pages—Title page (total of five)	B-3
Print Quality Pages—Page 1 (total of five)	B-4
Print Quality Pages—Page 2 (total of five)	B-5
Print Quality Pages—Page 3 (total of five)	B-6
Print Quality Pages—Page 4 (total of five)	B-7
Registration	B-8
Quick Test	B-8
Alignment test pages	B-9
Printhead alignment test pages—magenta (one of three)	B-9
Printhead alignment test page—yellow (two of three)	B-10
Printhead alignment test page—cyan (three of three)	B-11
Print Line Len page	B-12
Index	I-1
Part number index	I-7

For the complete PDF manual
please visit www.LaserPros.com.